



BL12406

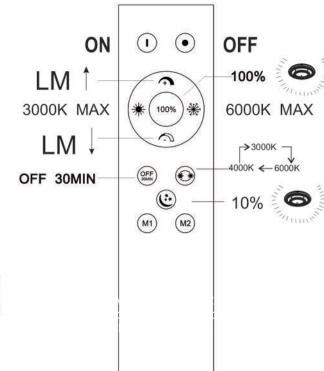

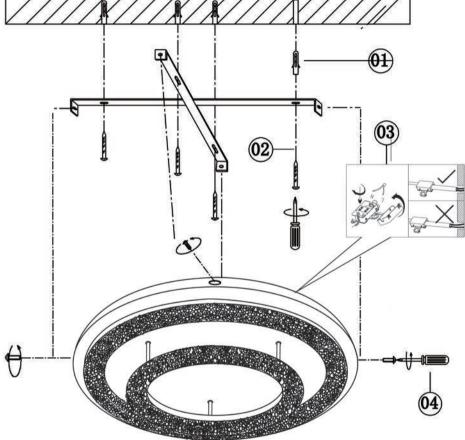

REMARKS: "M1 ,M2" Hold for 3 seconds to save, then press the button to change the brightness

To pair the light with remote control:

- 1. Press and hold the ON button on remote control.
- 2. Switch on the light from switch on wall.
- 3. The light will flash twice.
- 4. Release the ON button, switch off the light.
- 5. Switch the light back on.
- 6. Press and hold the ON button for 3 seconds.

The remote control should now be paired with the light.

Please operate the remote control within 15 meters distance of

the light